Clean-FloTM In-Line Filter Service Log

Each filter system should be serviced once a day

Date	Time	Operator	Stations Serviced	Initials
00/00/00	00:00	Spell last name	Circle stations serviced	JD
			1 2 3 4 5 6 7 8 9 10	
			12345678910	
			12345678910	
			12345678910	
			1 2 3 4 5 6 7 8 9 10	
			1 2 3 4 5 6 7 8 9 10	
			1 2 3 4 5 6 7 8 9 10	
			1 2 3 4 5 6 7 8 9 10	
			1 2 3 4 5 6 7 8 9 10	
			1 2 3 4 5 6 7 8 9 10	
			1 2 3 4 5 6 7 8 9 10	
			1 2 3 4 5 6 7 8 9 10	
			12345678910	
			1 2 3 4 5 6 7 8 9 10	
			12345678910	
			1 2 3 4 5 6 7 8 9 10	
			12345678910	
			12345678910	
			12345678910	
			12345678910	

CAUTION: Ensure ink pump is turned off and proper lock-out procedures followed prior to servicing filters.


Clean-FloTM In-Line Filter Service Instructions

Each filter system should be serviced once a day

- 1. Ensure ink pump is turned off and there is no flow through the ink filter.
- 2. Close any manual valves that may be on your filter system.
- 3. Loosen threaded hand knob (A) and lower swivel handle (B).
- 4. Remove filter cap assembly (C) by hand (no tools required).
- 5. Remove dirty filter cartridge (D) from filter cap.
- 6. Remove metallic debris (E) from magnetic probe using a rag. Start at the top of the magnetic probe and wipe downwards debris will release into the rag.
- 7. Check three gaskets (F) on filter cap—replace as required.
- 8. Install a clean filter cartridge (G).
- 9. Insert filter cap assembly (C) into filter body (H), ensure the cap is installed all the way and snug against the filter body.
- 10. Raise swivel arm (B) and center the foot of the hand knob on the plastic disk. Tighten threaded hand knob (A) by hand until it is snug—never overtighten.

<u>CAUTION</u>: NEVER US A WRENCH OR ANY TOOL TO TIGHTEN THE HAND KNOB! DAMAGE MAY RESULT

10. Be sure to open any manual valves that were closed for filter servicing.

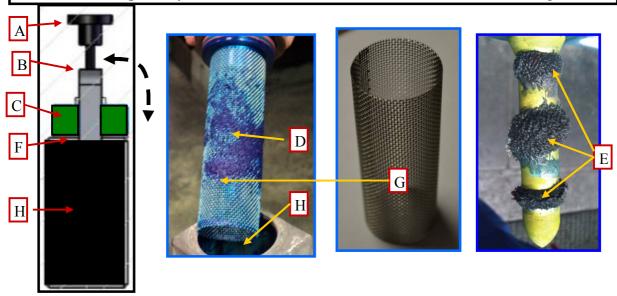

CAUTION: Ensure ink pump is turned off and proper lock-out procedures followed prior to servicing filters.